



STAR
outdoor

it's easy!

ELECTRIC PUMP INFLATABLE MANUAL

Packing List	2
Assembly/Disassembly	3
Securing	4
Maintenance and Safety	5
Blower Operation	6
Contact Information	7



PACKING LIST



Included with purchase


INFLATABLE



CONTINUOUS BLOWER*



ROPE & PEGS*

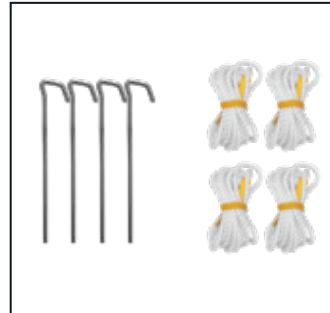

CARRY BAG



REPAIR PATCH



Additional Extras (recommended Securing Kit)

RATCHET STRAP*



WEIGHT PLATE



WEIGHT STAND



products may differ to what is pictured

ASSEMBLY



Unpack the inflatable and unfold on the ground



Locate the valves around the base of the inflatable. Make sure the RED valve is CLOSED.



Unscrew the top part of the BLACK valve and insert the electric pump to inflate.



Turn off pump once inflatable is completely inflated.



Always read the safety instructions printed on the leg are followed correctly.

DISASSEMBLY

Unscrew the RED valve and UNZIP zips, wait for a few minutes start rolling from the top of the inflatable*, two people recommended.



*See Dome Tent Manual for how to pack away Dome Tent after deflation.

Option 1 - Pegs through “D” Rings



Locate the “D” rings around the base of the inflatable. Secure peg into ground using a hammer.

Option 2 - Pegs & Guy Rope to loops



Using the rope provided, thread through the loop on the inflatable.

Hook the bottom of the rope to a peg and secure by tying a knot and hammering peg.

Set up is complete once all rope and pegs have been used.

Option 3 - Ratchet Straps from loops to weight stand



With the straps provided, hook them to each of the 4x loops on the top of the leg.

Hook the other side of the strap to the weight stand, once semi taut, crank to further tighten.

Set up is complete once all 4x securing kits are in place.

SAFETY WARNING

- Fair weather and indoor use only.
- Suffocation warning: stay clear of arch during deflation.
- Do not leave inflatable unattended during inflation or deflation.
- Do not suspend or attach anything other than approved parts to arch as it can impact safety and performance.
- In adverse weather please pack down your Inflatable, Star Outdoor does not take any responsibility for misuse or injury.

MAINTENANCE & CARE

- To clean, use a wet rag to scrub with a multipurpose cleaner.
- The inflatable is designed to remain continuously inflated even if holes are present, if the inflatable is unable to remain inflated due to significant damage, do not use the inflatable as it becomes hazardous.

NOTES

- DO NOT open zipper on inflatable once unit is inflated, as it will lose air rapidly.
- Keep arch away from sharp objects.

Recommended weight as per our engineers report:

INFLATABLE SIZE	NO. OF WEIGHT STANDS	ADDITIONAL WEIGHT PER STAND (KG)
4.0m - 6.0m	4	40
8.0m	4	50
10.0m +	4	80



WARNINGS:

- NEVER attempt to disassemble or close openings while pump is in operation.
- NEVER leave pump unattended while in use.
- DO NOT allow sand, small rocks, or other debris to be sucked into the inflation or deflation port while operating.
- DO NOT use under wet conditions. Keep away from water.
- DO NOT look into or point the inflate opening toward eyes while pump is in operation.
- This pump cannot be used for inflating tires or continuous use.
- ELECTRIC SHOCK RISK: Do not operate under moist conditions; store indoors.
- Keep pump away from children.
- If the AC supply cord is damaged, discard the air pump to avoid a hazard.

CAUTION: Air pump will be hot to the touch after prolonged use.

1. Screw hose attachment onto the inflation port of pump.

2. Unscrew the tent inflation valve and insert hose nozzle.

Note: Nozzle adaptors are included and may be attached for tighter connection.

3. Connect power supply cord to 100V-120V AC power source, then turn on the switch to begin inflating.

4. Individually inflate each leg for approximately 10 minutes before moving to the next leg. This keeps the legs evenly inflated and prevents the air pump from becoming hot to the touch.

5. Once inflated, turn off switch and disconnect power supply cord plug.

HAVE ANY QUESTIONS? CONTACT US BELOW

STAR OUTDOOR
B1/57 Assembly Street,
Salisbury QLD, 4107
1300 721 877
staroutdoor.com.au